

Fig. 1A

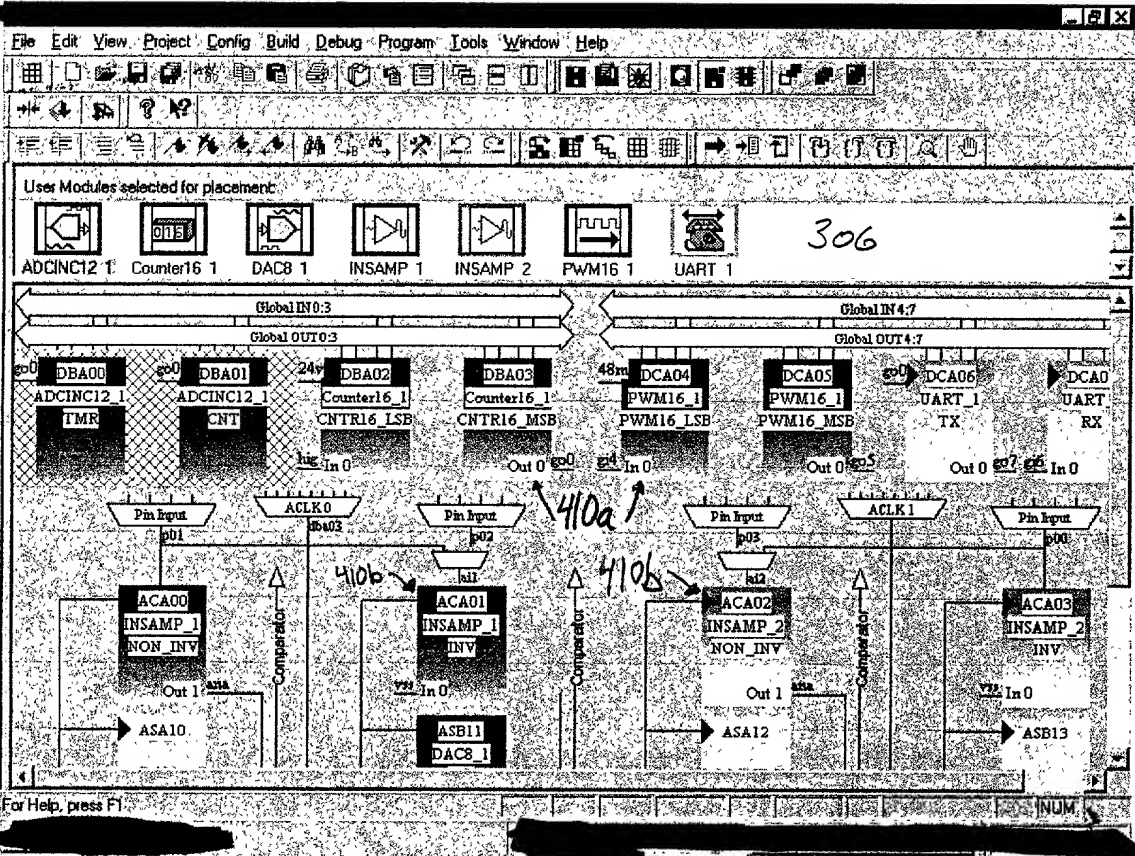


Fig 1 B

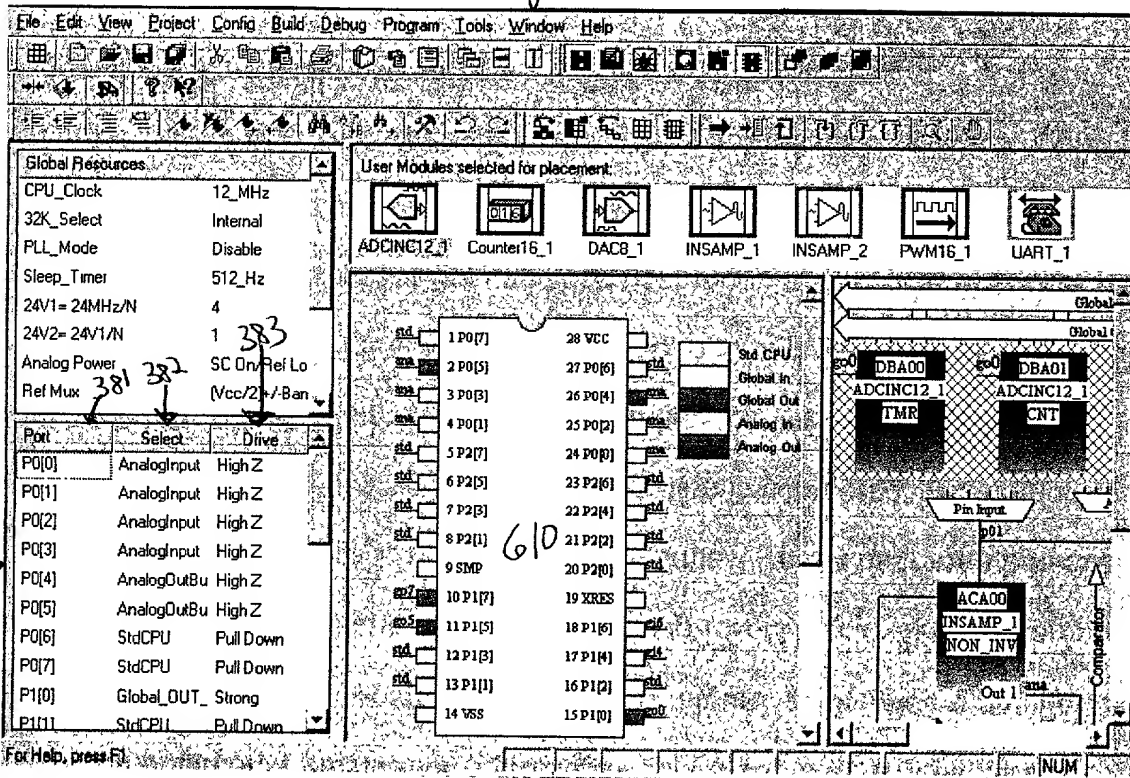


Fig 1 C

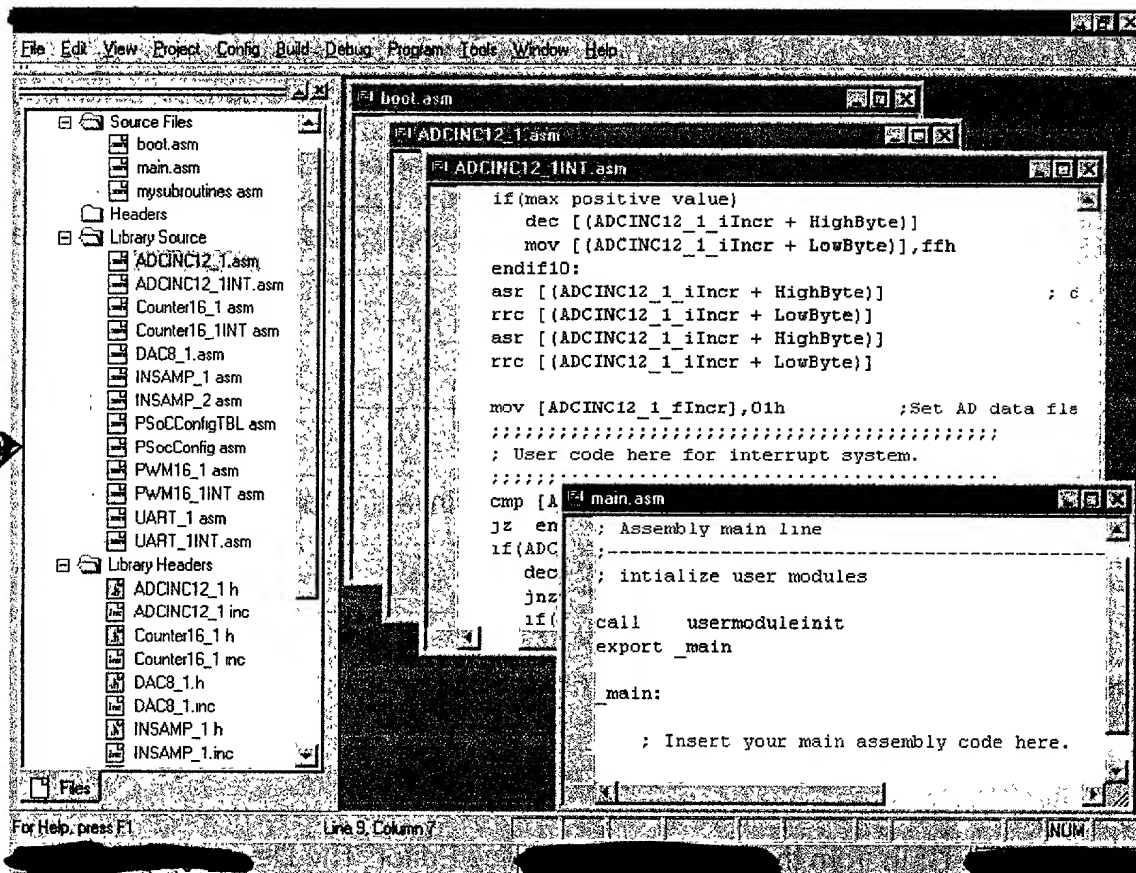


Fig. 1D

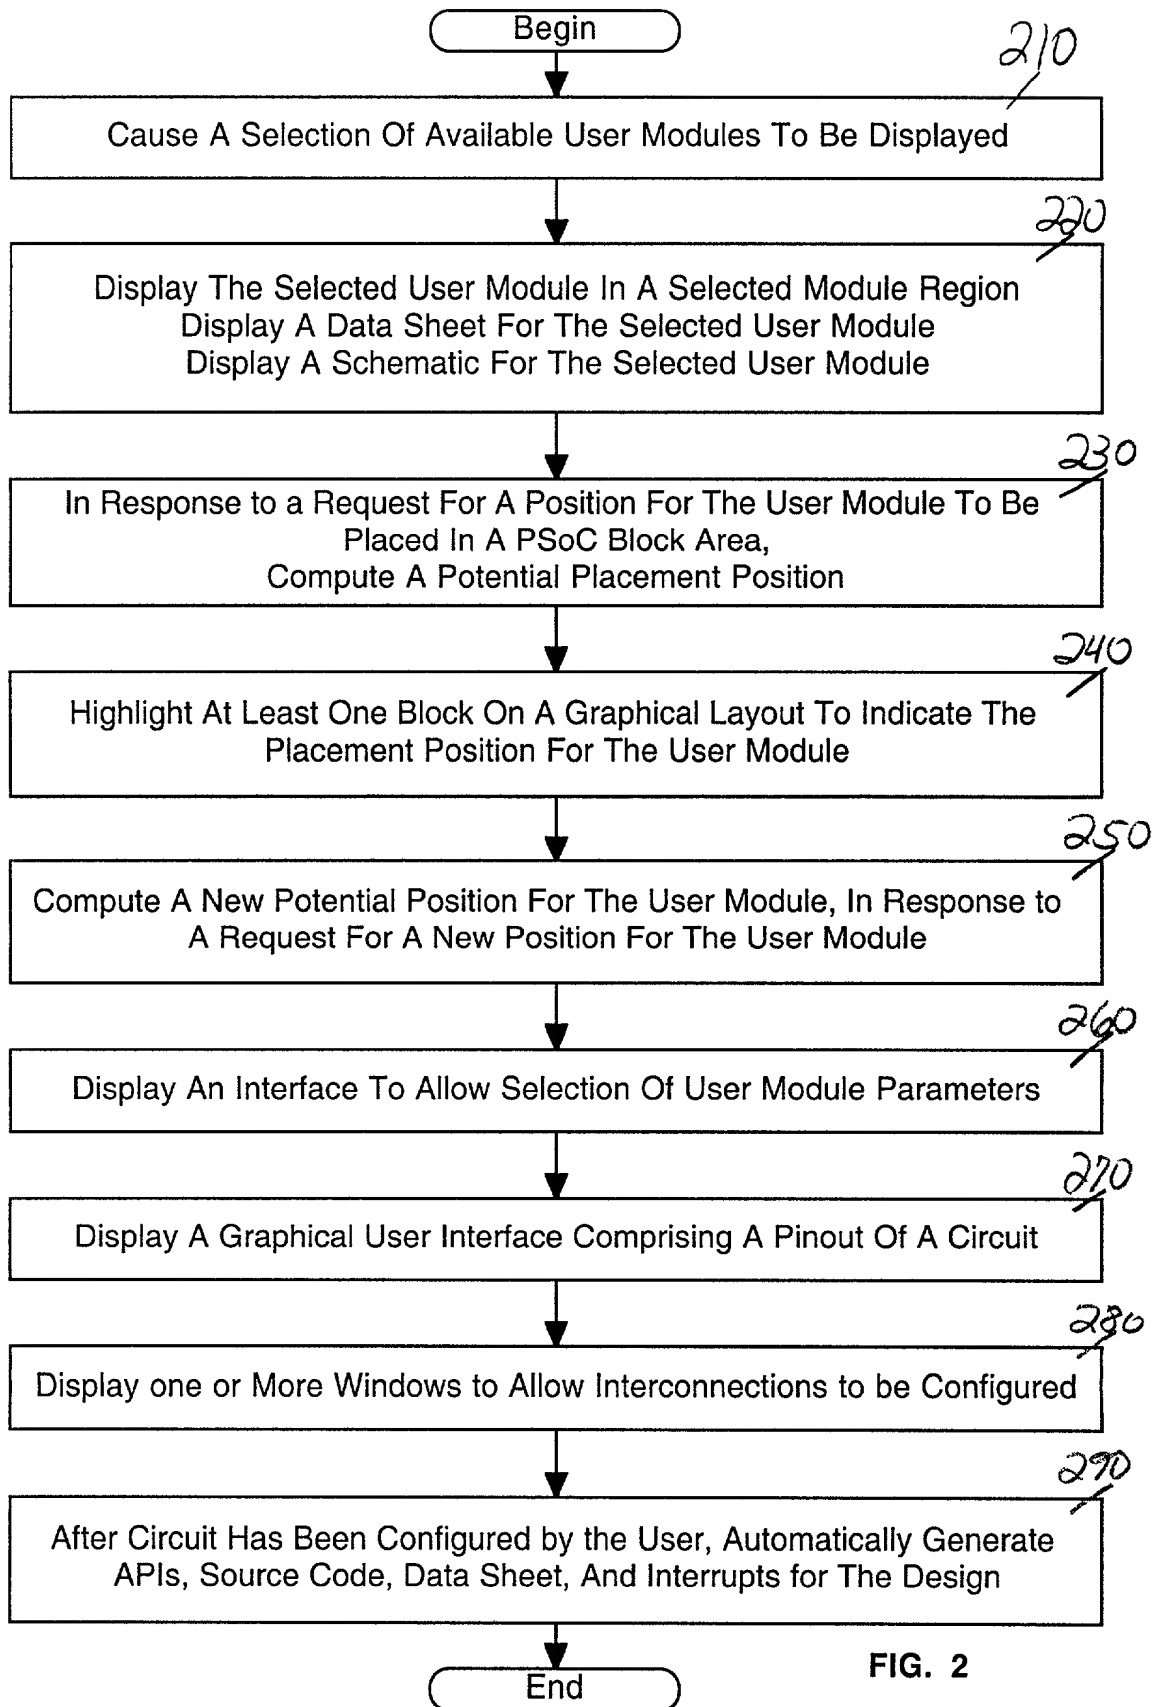


FIG. 2

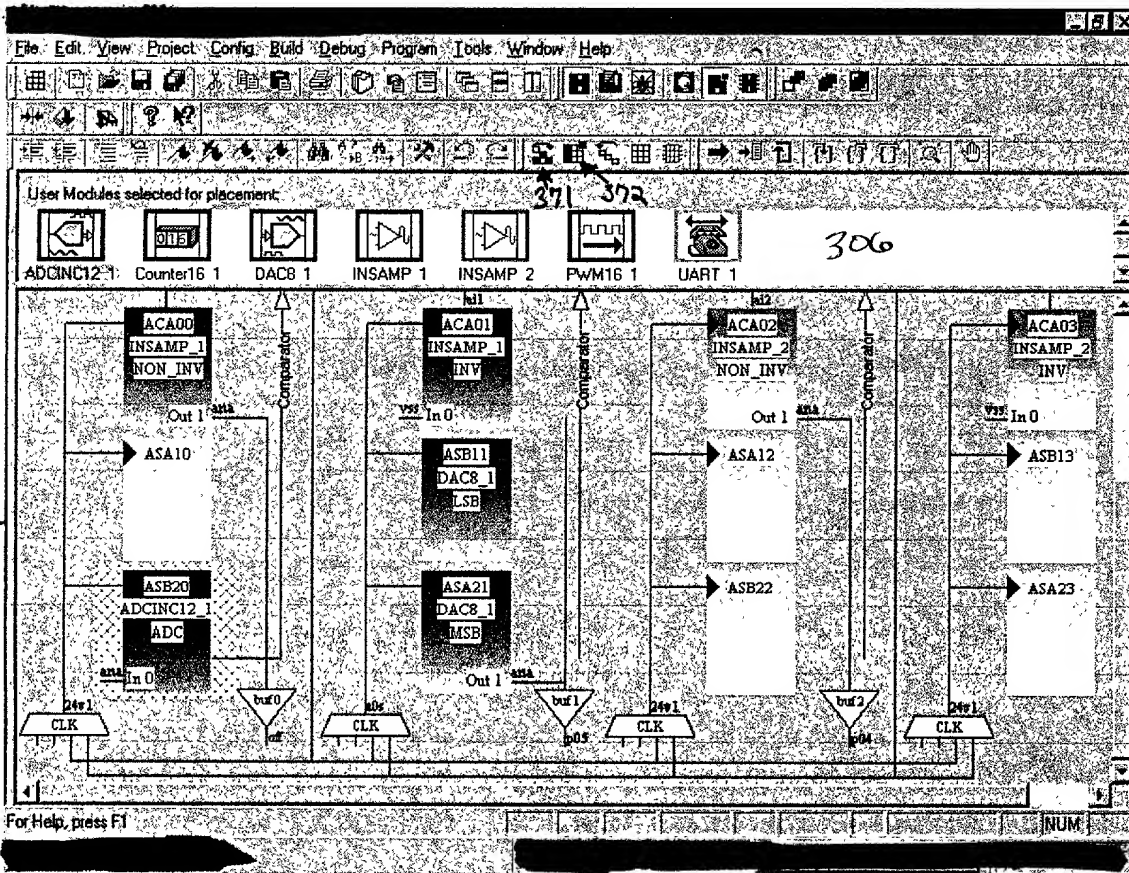
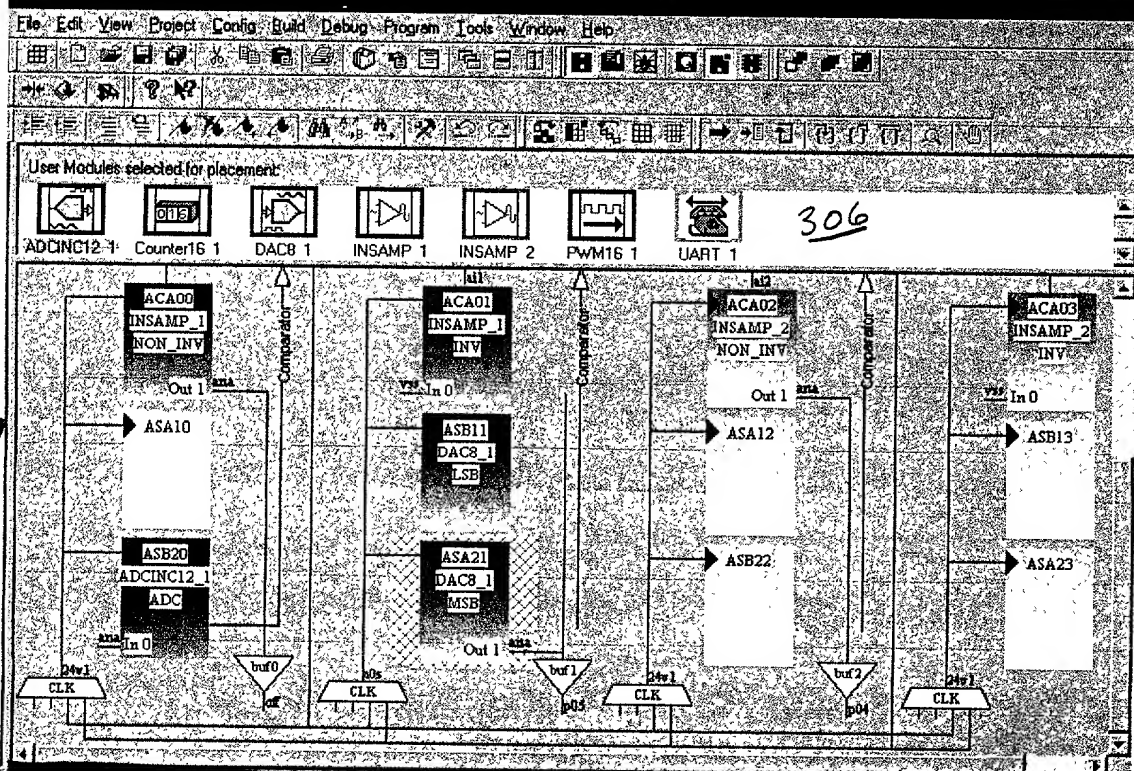
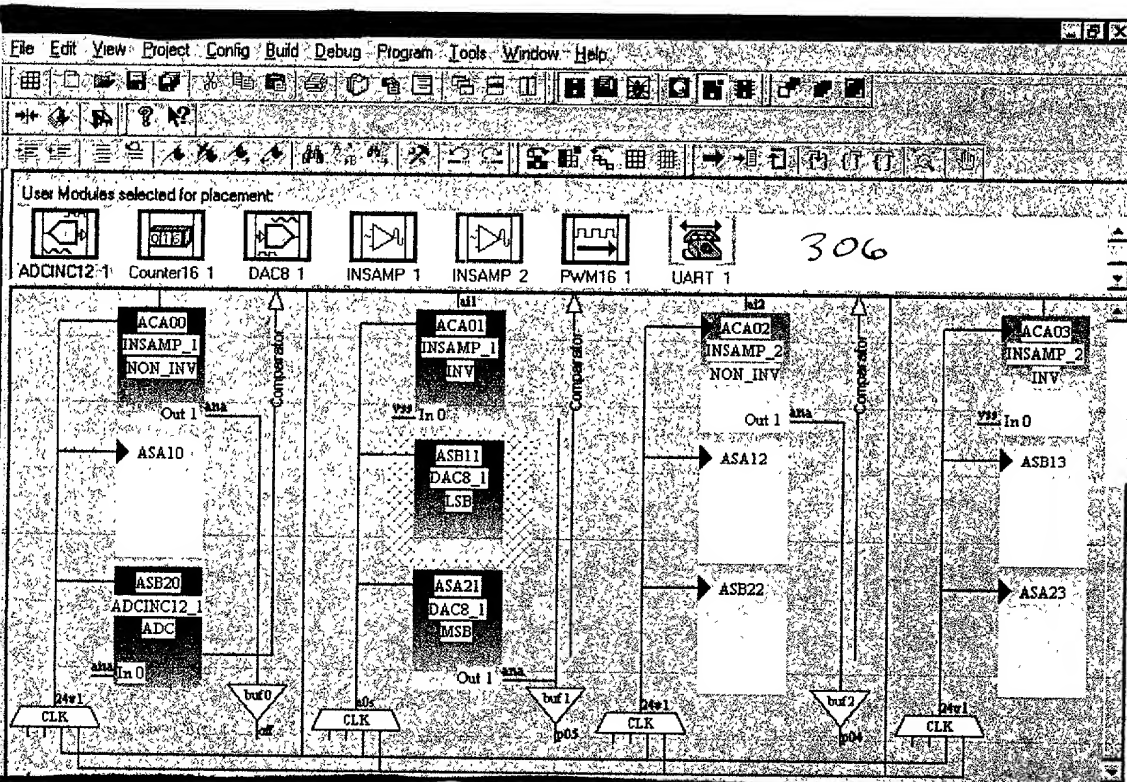


Fig. 3A



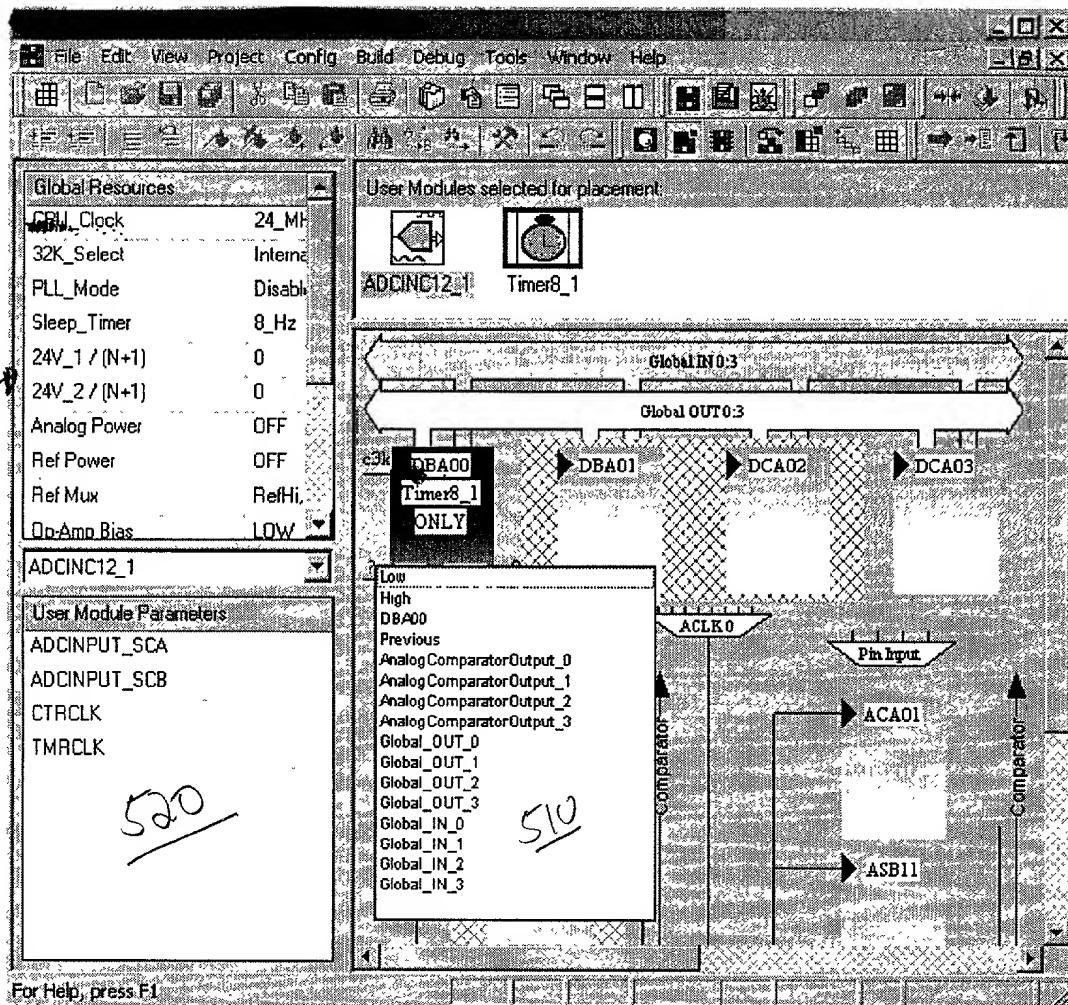


Fig. 4

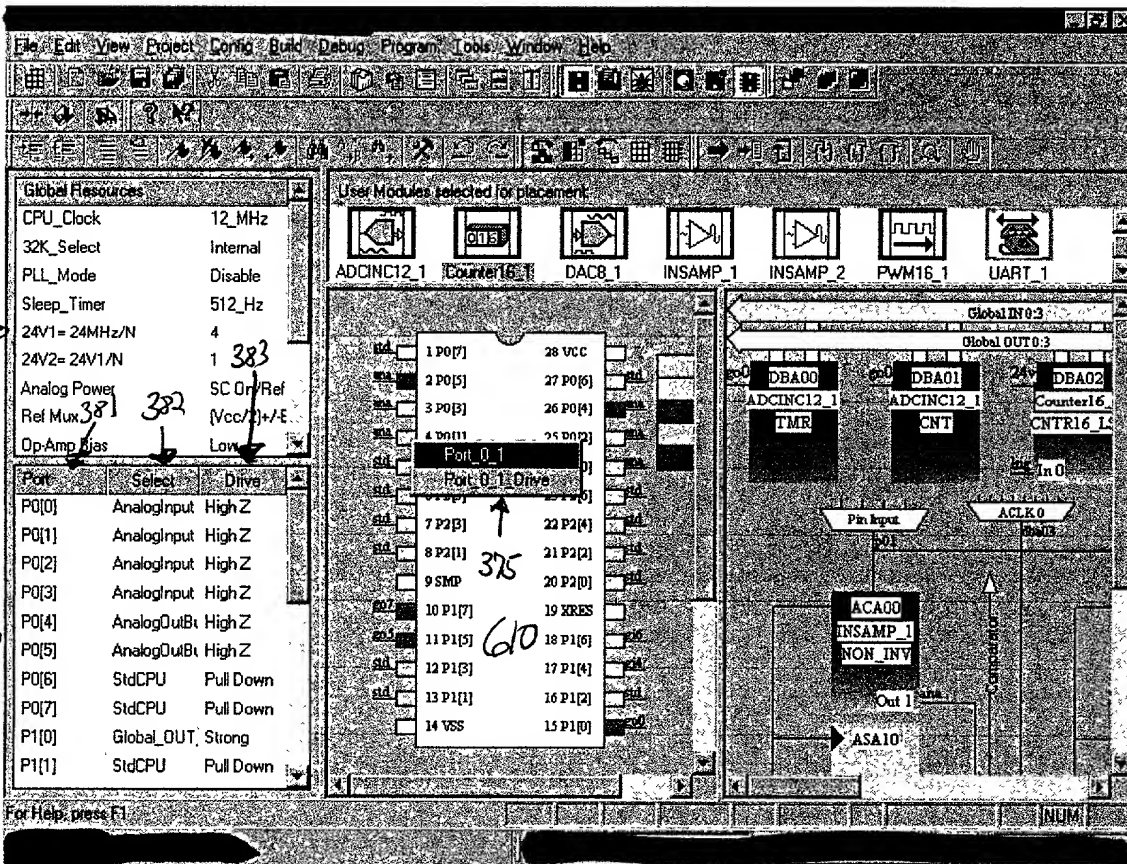


Fig. 54

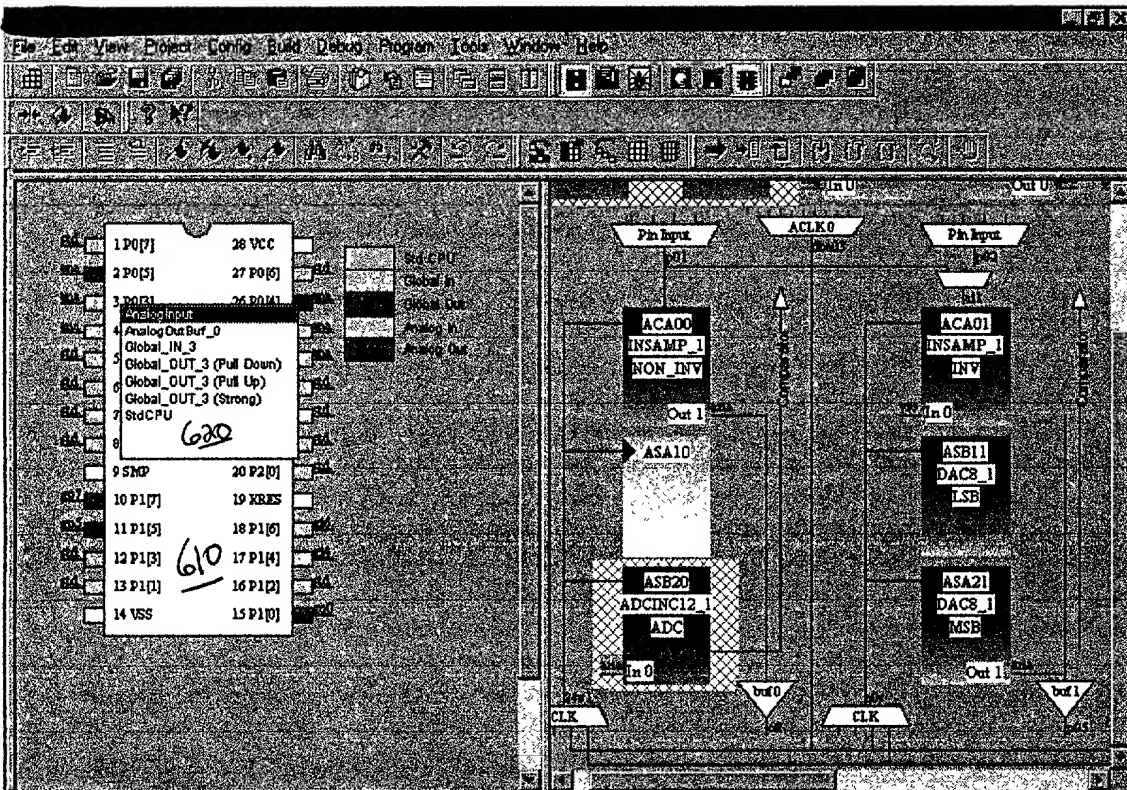


Fig. 5B

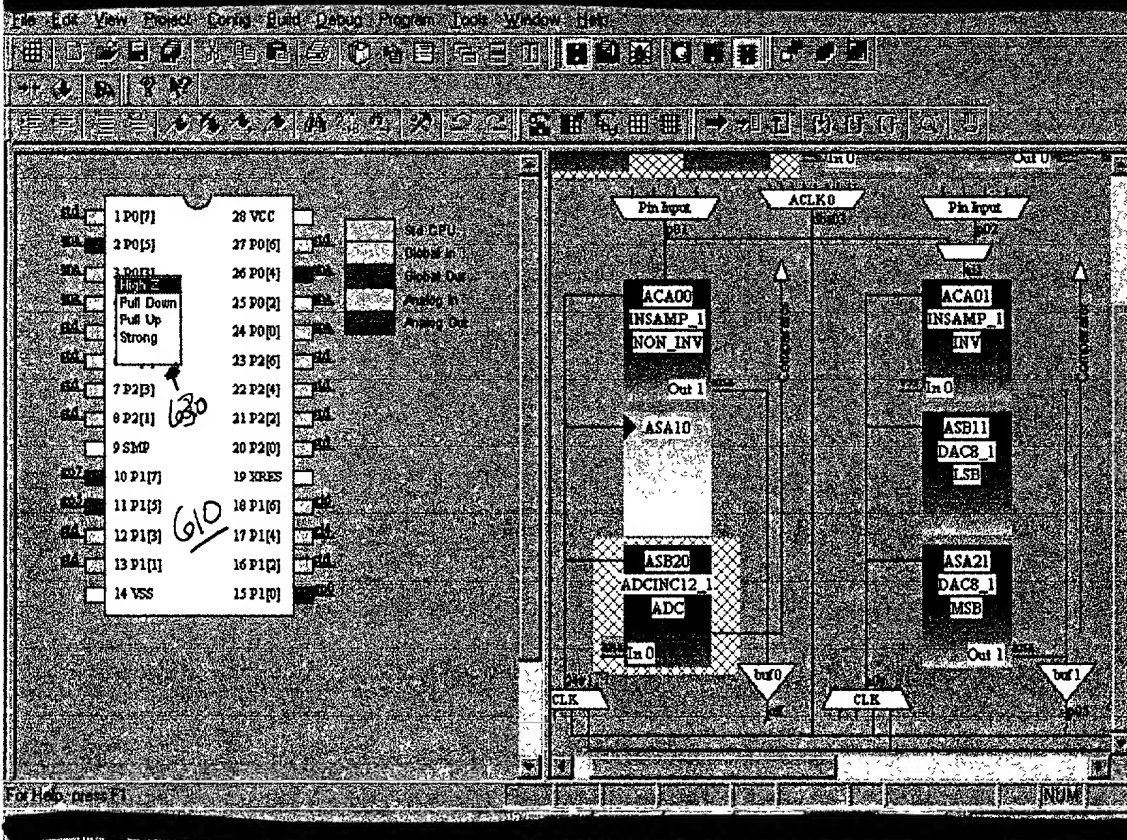


Fig. 5C

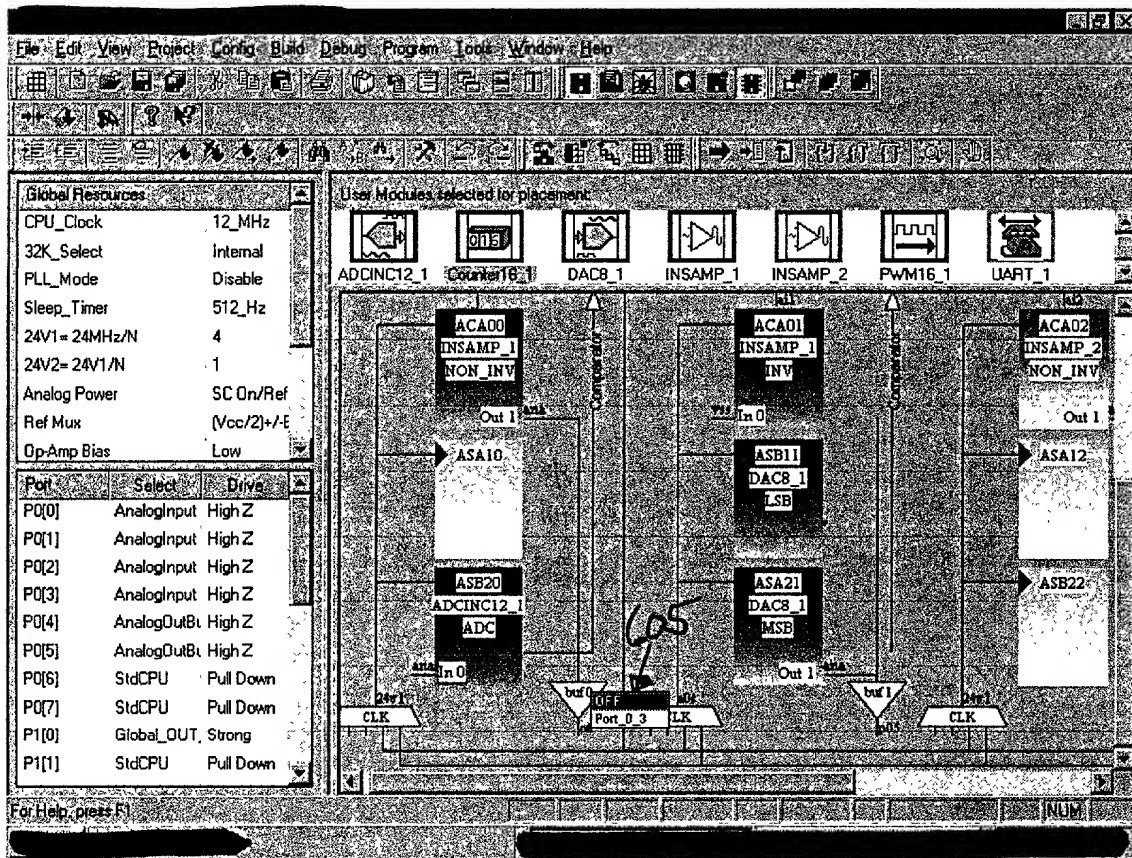


Fig. 6A

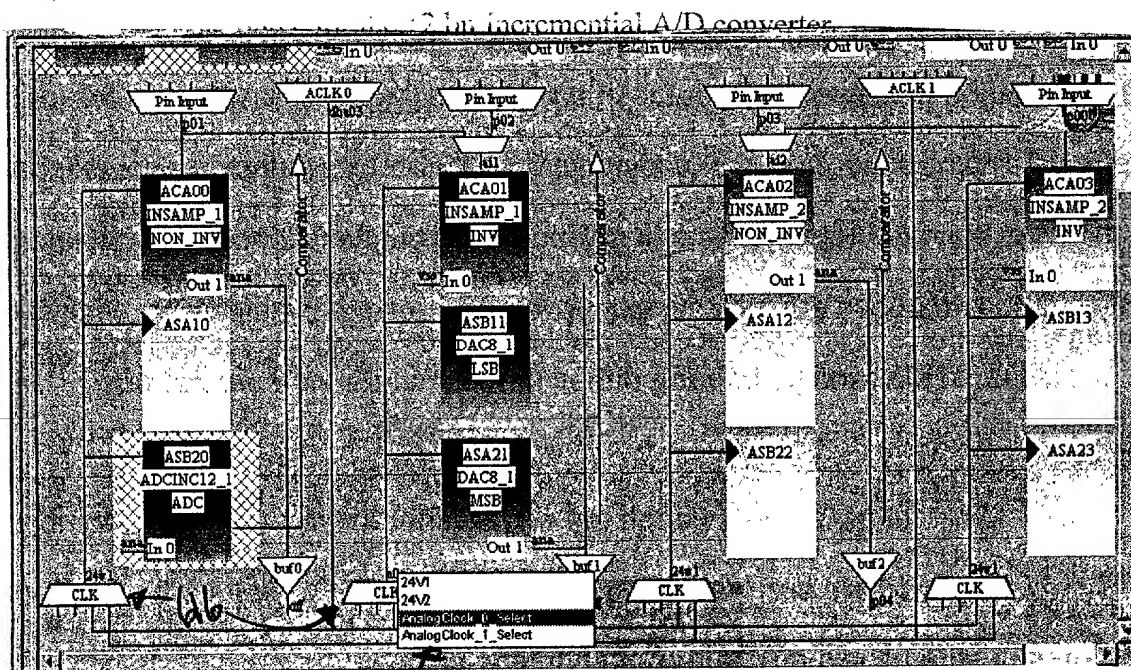


Fig. 6B

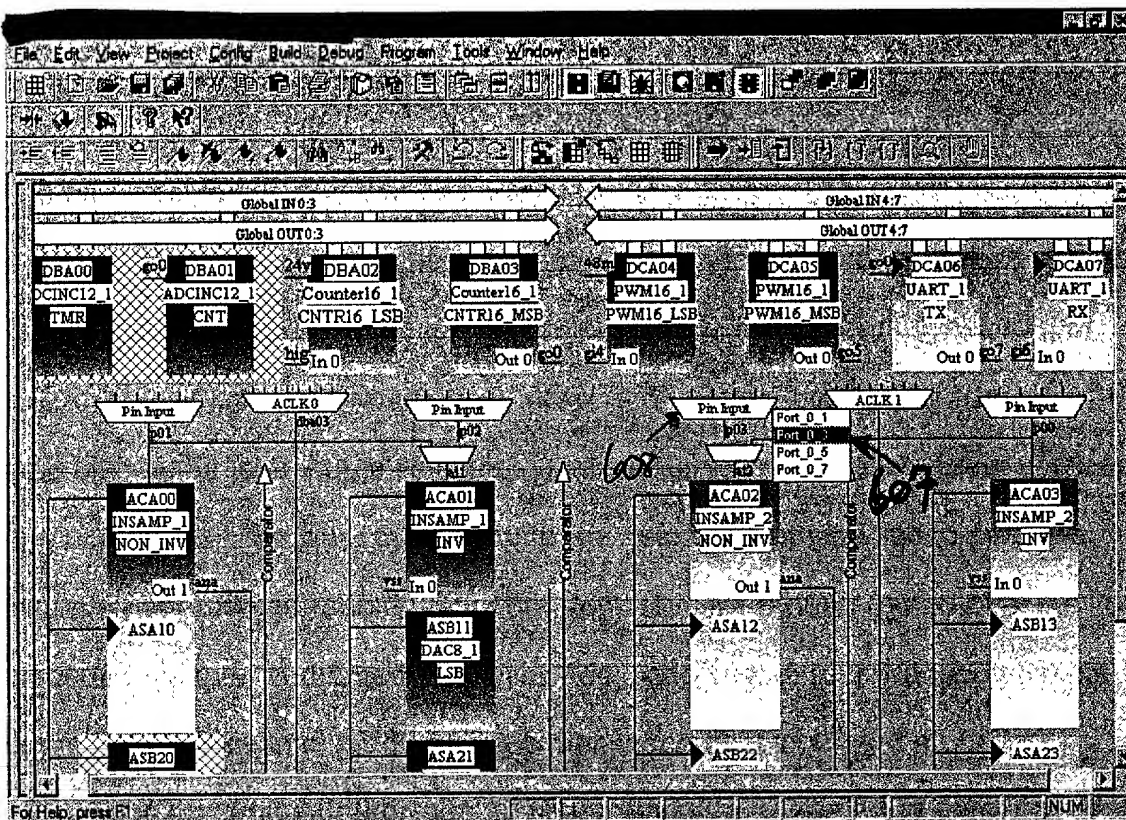


Fig. 6C

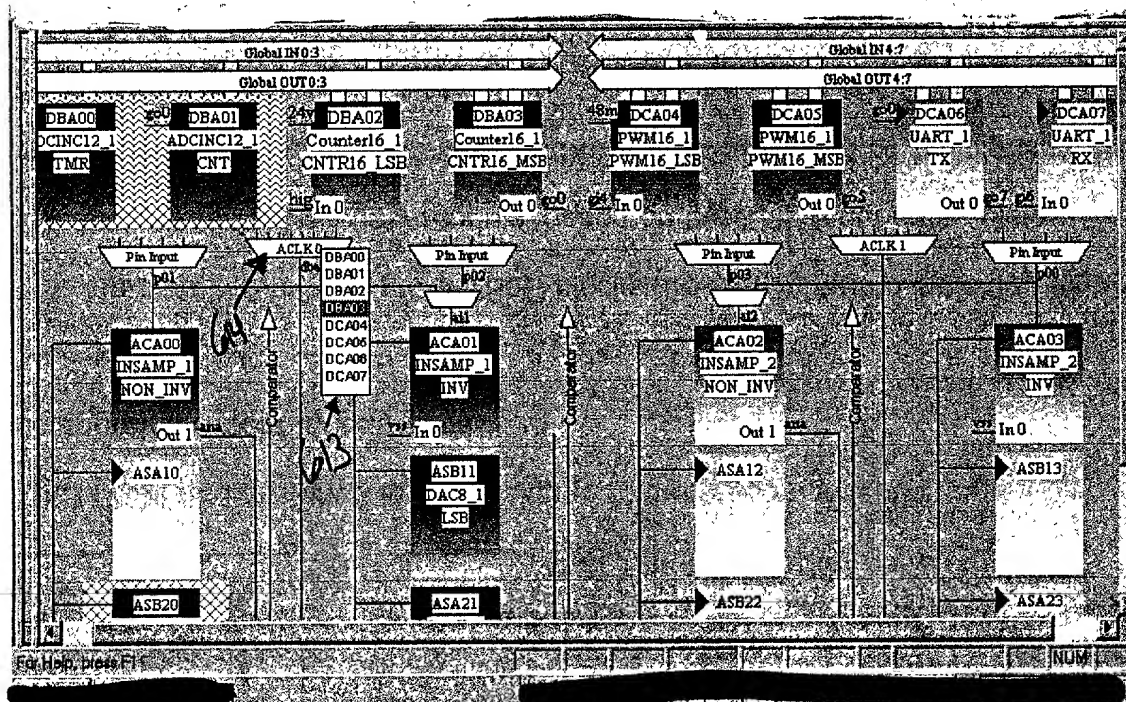


Fig. 6D

```

configtbl.asm
; Personalization tables
export LoadConfigTBL_project_Bank1
export LoadConfigTBL_project_Bank0
LoadConfigTBL_project_Bank1:
; Global Register values
    db        61h, 03h        ; AnalogClockSelect register
    db        60h, 08h        ; AnalogColumnClockSelect register
    db        62h, 30h        ; AnalogIOControl register
    db        63h, 00h        ; AnalogModulatorControl register
    db        e1h, 30h        ; OscillatorControl_1 register
    db        00h, 00h        ; Port_0_DriveMode_0 register
    db        01h, 3fh        ; Port_0_DriveMode_1 register
    db        04h, a1h        ; Port_1_DriveMode_0 register
    db        05h, 50h        ; Port_1_DriveMode_1 register
    db        08h, 00h        ; Port_2_DriveMode_0 register
    db        09h, 00h        ; Port_2_DriveMode_1 register
    db        0ch, 00h        ; Port_3_DriveMode_0 register
    db        0dh, 00h        ; Port_3_DriveMode_1 register
    db        10h, 00h        ; Port_4_DriveMode_0 register
    db        11h, 00h        ; Port_4_DriveMode_1 register
    db        14h, 00h        ; Port_5_DriveMode_0 register
    db        15h, 00h        ; Port_5_DriveMode_1 register
    db        e3h, 84h        ; VoltageMonitorControl register
; Instance name ADCINC12_1, User Module ADCINC12
; Instance name ADCINC12_1, Block Name ADC(ASB20)
    db        90h, 90h        ;ADCINC12_1_AtoDcr0
    db        91h, 60h        ;ADCINC12_1_AtoDcr1
    db        92h, 60h        ;ADCINC12_1_AtoDcr2
    db        93h, f0h        ;ADCINC12_1_AtoDcr3
; Instance name ADCINC12_1, Block Name CNT(DBA01)
    db        24h, 21h        ;ADCINC12_1_CounterFN
    db        25h, 48h        ;ADCINC12_1_CounterSL
    db        26h, 00h        ;ADCINC12_1_CounterOS
; Instance name ADCINC12_1, Block Name TMR(DBA00)
    db        20h, 20h        ;ADCINC12_1_TimerFN
    db        21h, 18h        ;ADCINC12_1_TimerSL
    db        22h, 00h        ;ADCINC12_1_TimerOS
; Instance name Counter16_1, User Module Counter16
; Instance name Counter16_1, Block Name CNTR16_LSB(DBA02)
    db        28h, 01h        ;Counter16_1_FUNC_LSB_REG
    db        29h, 16h        ;Counter16_1_INPUT_LSB_REG
    db        2ah, 00h        ;Counter16_1_OUTPUT_LSB_REG
; Instance name Counter16_1, Block Name CNTR16_MSB(DBA03)
    db        2ch, 21h        ;Counter16_1_FUNC_MSB_REG
    db        2dh, 36h        ;Counter16_1_INPUT_MSB_REG
    db        2eh, 04h        ;Counter16_1_OUTPUT_MSB_REG
; Instance name DAC8_1, User Module DAC8
; Instance name DAC8_1, Block Name LSB(ASB11)
    db        84h, 80h        ;DAC8_1_LSB_CR0
    db        85h, 80h        ;DAC8_1_LSB_CR1
    db        86h, 20h        ;DAC8_1_LSB_CR2
    db        87h, 30h        ;DAC8_1_LSB_CR3
; Instance name DAC8_1, Block Name MSB(ASA21)
    db        94h, a0h        ;DAC8_1_MSB_CR0

```

Fig. 7A

(Continued)

```

db          95h, 41h      ;DAC8_1_MSB_CR1
db          96h, a0h      ;DAC8_1_MSB_CR2
db          97h, 30h      ;DAC8_1_MSB_CR3
; Instance name INSAMP_1, User Module INSAMP
;   Instance name INSAMP_1, Block Name INV(ACA01)
db          75h, beh      ;INSAMP_1_INV_CR0
db          76h, 21h      ;INSAMP_1_INV_CR1
db          77h, 20h      ;INSAMP_1_INV_CR2
;   Instance name INSAMP_1, Block Name NON_INV(ACA00)
db          71h, 3ch      ;INSAMP_1_NON_INV_CR0
db          72h, a1h      ;INSAMP_1_NON_INV_CR1
db          73h, 20h      ;INSAMP_1_NON_INV_CR2
; Instance name INSAMP_2, User Module INSAMP
;   Instance name INSAMP_2, Block Name INV(ACA03)
db          7dh, ceh      ;INSAMP_2_INV_CR0
db          7eh, 21h      ;INSAMP_2_INV_CR1
db          7fh, 20h      ;INSAMP_2_INV_CR2
;   Instance name INSAMP_2, Block Name NON_INV(ACA02)
db          79h, 2ch      ;INSAMP_2_NON_INV_CR0
db          7ah, a1h      ;INSAMP_2_NON_INV_CR1
db          7bh, 20h      ;INSAMP_2_NON_INV_CR2
; Instance name PWM16_1, User Module PWM16
;   Instance name PWM16_1, Block Name PWM16_LSB(DCA04)
db          30h, 01h      ;PWM16_1_FUNC_LSB_REG
db          31h, c4h      ;PWM16_1_INPUT_LSB_REG
db          32h, 00h      ;PWM16_1_OUTPUT_LSB_REG
;   Instance name PWM16_1, Block Name PWM16_MSB(DCA05)
db          34h, 21h      ;PWM16_1_FUNC_MSB_REG
db          35h, 34h      ;PWM16_1_INPUT_MSB_REG
db          36h, 05h      ;PWM16_1_OUTPUT_MSB_REG
; Instance name UART_1, User Module UART
;   Instance name UART_1, Block Name RX(DCA07)
db          3ch, 05h      ;UART_1_RX_FUNC_REG
db          3dh, e1h      ;UART_1_RX_INPUT_REG
db          3eh, 00h      ;UART_1_RX_OUTPUT_REG
;   Instance name UART_1, Block Name TX(DCA06)
db          38h, 0dh      ;UART_1_TX_FUNC_REG
db          39h, 01h      ;UART_1_TX_INPUT_REG
db          3ah, 07h      ;UART_1_TX_OUTPUT_REG
db          ffh
LoadConfigTBL_project_Bank0:
; Global Register values
db          60h, 14h      ; AnalogColumnInputSelect register
db          63h, 05h      ; AnalogReferenceControl register
db          65h, 00h      ; AnalogSyncControl register
db          e6h, 00h      ; DecimatorControl register
db          02h, 00h      ; Port_0_Bypass register
db          06h, f1h      ; Port_1_Bypass register
db          0ah, 00h      ; Port_2_Bypass register
db          0eh, 00h      ; Port_3_Bypass register
db          12h, 00h      ; Port_4_Bypass register
db          16h, 00h      ; Port_5_Bypass register
; Instance name ADCINC12_1, User Module ADCINC12
;   Instance name ADCINC12_1, Block Name ADC(ASB20)
;   Instance name ADCINC12_1, Block Name CNT(DBA01)

```

Fig. 7B

(Continued)

```

db          27h, 00h      ;ADCINC12_1_CounterCR0
db          25h, 00h      ;ADCINC12_1_CounterDR1
db          26h, 00h      ;ADCINC12_1_CounterDR2
; Instance name ADCINC12_1, Block Name TMR(DBA00)
db          23h, 00h      ;ADCINC12_1_TimerCR0
db          21h, 00h      ;ADCINC12_1_TimerDR1
db          22h, 00h      ;ADCINC12_1_TimerDR2
; Instance name Counter16_1, User Module Counter16
; Instance name Counter16_1, Block Name CNTR16_LSB(DBA02)
db          2bh, 00h      ;Counter16_1_CONTROL_LSB_REG
db          29h, 80h      ;Counter16_1_PERIOD_LSB_REG
db          2ah, 64h      ;Counter16_1_COMPARE_LSB_REG
; Instance name Counter16_1, Block Name CNTR16_MSB(DBA03)
db          2fh, 00h      ;Counter16_1_CONTROL_MSB_REG
db          2dh, 00h      ;Counter16_1_PERIOD_MSB_REG
db          2eh, 00h      ;Counter16_1_COMPARE_MSB_REG
; Instance name DAC8_1, User Module DAC8
; Instance name DAC8_1, Block Name LSB(ASB11)
; Instance name DAC8_1, Block Name MSB(ASA21)
; Instance name INSAMP_1, User Module INSAMP
; Instance name INSAMP_1, Block Name INV(ACA01)
; Instance name INSAMP_1, Block Name NON_INV(ACA00)
; Instance name INSAMP_2, User Module INSAMP
; Instance name INSAMP_2, Block Name INV(ACA03)
; Instance name INSAMP_2, Block Name NON_INV(ACA02)
; Instance name PWM16_1, User Module PWM16
; Instance name PWM16_1, Block Name PWM16_LSB(DCA04)
db          33h, 00h      ;PWM16_1_CONTROL_LSB_REG
db          31h, 37h      ;PWM16_1_PERIOD_LSB_REG
db          32h, 64h      ;PWM16_1_PWDITH_LSB_REG
; Instance name PWM16_1, Block Name PWM16_MSB(DCA05)
db          37h, 00h      ;PWM16_1_CONTROL_MSB_REG
db          35h, 00h      ;PWM16_1_PERIOD_MSB_REG
db          36h, 00h      ;PWM16_1_PWDITH_MSG_REG
; Instance name UART_1, User Module UART
; Instance name UART_1, Block Name RX(DCA07)
db          3fh, 00h      ;UART_1_RX_CONTROL_REG
db          3dh, 00h      ;UART_1_
db          3eh, 00h      ;UART_1_RX_BUFFER_REG
; Instance name UART_1, Block Name TX(DCA06)
db          3bh, 00h      ;UART_1_TX_CONTROL_REG
db          39h, 00h      ;UART_1_TX_BUFFER_REG
db          3ah, 00h      ;UART_1_
db          ffh

```

; PSoC Configuration file trailer PsocConfig.asm

Fig. 7C


```

; PSoCConfig.asm
;
; This file is generated by the Device Editor on Application Generation.
; It contains code which loads the configuration data table generated in
; the file PSoCConfigTBL.asm
;

export LoadConfigInit
export _LoadConfigInit
export LoadConfig_project
export _LoadConfig_project

FLAG_CFG_MASK:          equ    10h                ;M8C flag register REG address bit
mask
END_CONFIG_TABLE:      equ    ffh                ;end of config table indicator

_LoadConfigInit:
LoadConfigInit:
    lcall    LoadConfig_project

    ret

;
; Load Configuration project
;
_LoadConfig_project:
LoadConfig_project:
    or          F, FLAG_CFG_MASK                ;set for
bank 1
    mov         A, >LoadConfigTBL_project_Bank1 ;load bank 1 table
    mov         X, <LoadConfigTBL_project_Bank1
    call        LoadConfig                      ;load the
bank 1 values
    and         F, ~FLAG_CFG_MASK              ;switch
to bank 0
    mov         A, >LoadConfigTBL_project_Bank0 ;load bank 0 table
    mov         X, <LoadConfigTBL_project_Bank0
    call        LoadConfig                      ;load the
bank 0 values
    ret

;
; LoadConfig
;
; This function is not exported. It assumes that the address of the table
; to be loaded is contained in the X and A registers as if a romx instruction

```

Fig. 8A

(continued)

; is the next instruction to be executed, i.e. lower address in X and upper
; address in A. There is no return value.

;

LoadConfig:

LoadConfigLp:

```

    push    X                ;save config table address on stack
    push    A
    romx                    ;load config address
    cmp     A, END_CONFIG_TABLE ;check for end of table
    jz      EndLoadConfig    ;if so, end of load
    mov     X, SP            ;save the address away
    mov     [X], A
    pop     A                ;retrieve the table address
    pop     X
    inc     X                ;advance to the data byte
    jnc     NoOverflow1      ;check for overflow
    inc     A                ;if so, increment MSB

```

NoOverflow1:

```

    push    X                ;save the config table address
again
    push    A
    romx                    ;load the config data
    mov     X, SP            ;retrieve the config address
    mov     X, [X]
    mov     reg[X], A        ;write the config data
    pop     A                ;retrieve the table address
    pop     X
    inc     X                ;advance to the next

```

address

```

    jnc     NoOverflow2      ;check for overflow
    inc     A                ;if so, increment MSB

```

NoOverflow2:

```

    jmp     LoadConfigLp    ;loop back

```

EndLoadConfig:

```

    pop     A                ;clean up the stack
    pop     A
    ret

```

Fig. 8B

```

*****
;;
*****
;;
;; ADCINC12.asm
;;
;; Assembler source for the 12 bit Incremental
;; A/D converter.
;;
*****
*****

export ADCINC12_1_Start
export _ADCINC12_1_Start
export ADCINC12_1_SetPower
export _ADCINC12_1_SetPower
export ADCINC12_1_Stop
export _ADCINC12_1_Stop
export ADCINC12_1_GetSamples
export _ADCINC12_1_GetSamples
export ADCINC12_1_StopAD
export _ADCINC12_1_StopAD
export ADCINC12_1_flgData
export _ADCINC12_1_flgData
export ADCINC12_1_iGetData
export _ADCINC12_1_iGetData
export ADCINC12_1_ClearFlag
export _ADCINC12_1_ClearFlag

include "ADCINC12_1.inc"
include "m8c.inc"

LowByte: equ 1
HighByte: equ 0

;;-----
;; Start:
;; SetPower:
;; Applies power setting to the module's analog
;; PSoc block.
;; INPUTS: A contains the power setting
;; OUTPUTS: None.
;;-----
ADCINC12_1_Start:
_ADCINC12_1_Start:
ADCINC12_1_SetPower:
_ADCINC12_1_SetPower:
    and A,03h
    or A,f0h

```

```

    mov reg[ADCINC12_1_AtoDcr3],A
    ret

;;-----
;; Stop:
;; SetPower:
;; Removes power from the module's analog
;; PSoc block.
;; INPUTS: None.
;; OUTPUTS: None.
;;-----
ADCINC12_1_Stop:
_ADCINC12_1_Stop:
    and reg[ADCINC12_1_AtoDcr3], ~03h
    ret

;;-----
;; Get_Samples:
;; SetPower:
;; Starts the A/D convertor and will place data in
;; memory. A flag
;; is set whenever a new data value is available.
;; INPUTS: A passes the number of samples (0
;; is continuous).
;; OUTPUTS: None.
;;-----
ADCINC12_1_GetSamples:
_ADCINC12_1_GetSamples:
    mov [ADCINC12_1_bIncrC],A        ;number
;of samples
    or reg[INT_MSK1],(ADCINC12_1_TimerMask |
ADCINC12_1_CounterMask )
                                ;Enable both interrupts
    mov [ADCINC12_1_cTimerU],0      ;Force the
;Timer to do one cycle of rest
    or reg[ADCINC12_1_AtoDcr3],10h ;force the
;Integrator into reset
    mov [ADCINC12_1_cCounterU],ffh ;Initialize
;Counter

    mov reg[ADCINC12_1_TimerDR1],ffh
    mov reg[ADCINC12_1_CounterDR1],ffh
    mov reg[ADCINC12_1_TimerCR0],01h ;enable
;the Timer
    mov [ADCINC12_1_flgIncr],00h    ;A/D Data
;Ready Flag is reset
    ret

```

Fig.94

(Continued)

```

;;-----
;; StopAD:
;; Completely shuts down the A/D in an orderly
;;manner. Both the
;; Timer and COUNTER interrupts are disabled.
;; INPUTS: None.
;; OUTPUTS: None.
;;-----
ADCINC12_1_StopAD:
_ADCINC12_1_StopAD:
    mov reg[ADCINC12_1_TimerCR0],00h
;disable the Timer
    mov reg[ADCINC12_1_CounterCR0],00h
;disable the Counter
    nop
    nop
    and
reg[INT_MSK1],~(ADCINC12_1_TimerMask |
ADCINC12_1_CounterMask)
                ;Disable both
;;interrupts
    or reg[ADCINC12_1_AtoDcr3],10h    ;reset
;;Integrator
    ret
;;-----
;; flsData:
;; Returns the status of the A/D Data
;; is set whenever a new data value is available.
;; INPUTS: None.
;; OUTPUTS: A returned data status A =: 0 no
;;data available
;;
                !=: 0 data available.
;;-----
ADCINC12_1_flsData:
_ADCINC12_1_flsData:
    mov A,[ADCINC12_1_flgcr]
    ret
;;-----
;; iGetData:
;; Returns the data from the A/D. Does not
;;check if data is
;; available.
;; is set whenever a new data value is available.
;; INPUTS: None.
;; OUTPUTS: X:A returns the A/D data value.
;;-----
ADCINC12_1_iGetData:

```

```

_ADCINC12_1_iGetData:
    mov X,[(ADCINC12_1_flgcr + HighByte)]
    mov A,[(ADCINC12_1_flgcr + LowByte)]
    ret

```

```

;;-----
;; ClearFlag:
;; clears the data ready flag.
;; INPUTS: None.
;; OUTPUTS: None.
;;-----
ADCINC12_1_ClearFlag:
_ADCINC12_1_ClearFlag:
    mov [ADCINC12_1_flgcr],00h
    ret
ADCINC12_1_API_End:

```

F₁₆.9B

HEADER FILES /*******

/*******

//

// ADCINC12_1.h for the 12 bit incremental A/D converter

//

// C declarations for the ADCINC12 User Module.

//

//

/*******

/*******

#define ADCINC12_1_OFF 0

#define ADCINC12_1_LOWPOWER 1

#define ADCINC12_1_MEDPOWER 2

#define ADCINC12_1_HIGHPower 3

#pragma fastcall ADCINC12_1_Start

#pragma fastcall ADCINC12_1_SetPower

#pragma fastcall ADCINC12_1_GetSamples

#pragma fastcall ADCINC12_1_StopAD

#pragma fastcall ADCINC12_1_Stop

#pragma fastcall ADCINC12_1_flsData

#pragma fastcall ADCINC12_1_iGetData

#pragma fastcall ADCINC12_1_ClearFlag

extern void ADCINC12_1_Start(char power);

extern void ADCINC12_1_SetPower(char power);

extern void ADCINC12_1_GetSamples(char chout);

extern void ADCINC12_1_StopAD(void);

extern void ADCINC12_1_Stop(void);

extern char ADCINC12_1_flsData(void);

extern int ADCINC12_1_iGetData(void);

extern void ADCINC12_1_ClearFlag(void);

Fig. 10

```

..*****
;;
;;
;; ADCINC12_1.inc for the 12 bit incremental A/D converter
;;
;;
;; Assembler declarations for the ACDINC12 User Module.
****
****
..*****
;;
..*****
;;

ADCINC12_1_AtoDcr0:   equ   90h
ADCINC12_1_AtoDcr1:   equ   91h
ADCINC12_1_AtoDcr2:   equ   92h
ADCINC12_1_AtoDcr3:   equ   93h
ADCINC12_1_CounterFN: equ   24h
ADCINC12_1_CounterSL: equ   25h
ADCINC12_1_CounterOS: equ   26h
ADCINC12_1_CounterDR0: equ   24h
ADCINC12_1_CounterDR1: equ   25h
ADCINC12_1_CounterDR2: equ   26h
ADCINC12_1_CounterCR0: equ   27h
ADCINC12_1_TimerFN:   equ   20h
ADCINC12_1_TimerSL:   equ   21h
ADCINC12_1_TimerOS:   equ   22h
ADCINC12_1_TimerDR0:  equ   20h
ADCINC12_1_TimerDR1:  equ   21h
ADCINC12_1_TimerDR2:  equ   22h
ADCINC12_1_TimerCR0:  equ   23h
ADCINC12_1_TimerMask: equ   01h
ADCINC12_1_CounterMask: equ 02h
ADCINC12_1_OFF:       equ   0
ADCINC12_1_LOWPOWER:  equ   1
ADCINC12_1_MEDPOWER:  equ   2
ADCINC12_1_HIGHPOWER: equ   3
ADCINC12_1_NUMBITS:   equ  12

```

Fig. 11


```

;.....
;; ADCINC12int.asm
;;
;;
;; Assembler source for interrupt routines the 12 bit Incremental
;;A/D Converter
;.....

export ADCINC12_1_CNT_INT
export ADCINC12_1_TMR_INT
include "ADCINC12_1.inc"
include "m8c.inc"

area bss(RAM)
    ADCINC12_1_cTimerU: BLK 1 ;The Upper byte of the Timer
    ADCINC12_1_cCounterU: BLK 1 ;The Upper byte of the Counter
    _ADCINC12_1_ilncr:
    ADCINC12_1_ilncr: BLK 2 ;A/D value
    _ADCINC12_1_flncr:
    ADCINC12_1_flncr: BLK 1 ;Data Valid Flag
    ADCINC12_1_blncrC: BLK 1 ;# of times to run A/D

area text(ROM,REL)

export ADCINC12_1_cTimerU
export ADCINC12_1_cCounterU
export _ADCINC12_1_ilncr
export ADCINC12_1_ilncr
export _ADCINC12_1_flncr
export ADCINC12_1_flncr
export ADCINC12_1_blncrC

LowByte: equ 1
HighByte: equ 0

;.....
;; CNT_INT:
;; Decrement the upper (software) half on the counter whenever the
;; lower (hardware) half of the counter underflows.
;; INPUTS: None.
;; OUTPUTS: None.
;.....
ADCINC12_1_CNT_INT:
    dec [ADCINC12_1_cCounterU]
    reti

;.....
;; TMR_INT:
;; This routine allows the counter to collect data for 64 timer cycles
;; This routine then holds the integrater in reset for one cycle while
;; the A/D value is calculated.
;; INPUTS: None.
;; OUTPUTS: None.
;.....
ADCINC12_1_TMR_INT:
    dec [ADCINC12_1_cTimerU]
; if(upper count >=0 )
    jc else1
    reti
else1:;(upper count decremented pass 0)
    tst reg[ADCINC12_1_AtoDcr3],10h ;to change when ice is fixed dbz
    jz else2

```

Fig 12A

(continued)

```

; if(A/D has been in reset mode)
    mov reg[ADCINC12_1_CounterCR0],01h ; Enable Counter
    and reg[ADCINC12_1_AtoDcr3],~10h ; Enable Analog Integrator
    mov [ADCINC12_1_cTimerU],((1<<(ADCINC12_1_NUMBITS - 6))-1)
    ; This will be the real counter value

    reti

else2:;(A/D has been in integrate mode)
    mov reg[ADCINC12_1_CounterCR0],00h ;disable counter
    or F,01h ;Enable the interrupts
    ; Good place to add code to switch inputs for multiplexed input to ADC
    ;Reset Integrator
    or reg[ADCINC12_1_AtoDcr3],10h
    mov [(ADCINC12_1_ilncr + LowByte)],ffh
    mov [(ADCINC12_1_ilncr + HighByte)],(ffh - (1<<(ADCINC12_1_NUMBITS - 7)))

;
    push A
    mov A, reg[ADCINC12_1_CounterDR0] ;read Counter
    mov A, reg[ADCINC12_1_CounterDR2] ;now you really read the data
    sub [(ADCINC12_1_ilncr + LowByte)],A
    mov A,[ADCINC12_1_cCounterU]
    sbb [(ADCINC12_1_ilncr + HighByte)],A
    pop A
    cmp [(ADCINC12_1_ilncr + HighByte)],(1<<(ADCINC12_1_NUMBITS - 7))
    jnz endif10

; if(max positive value)
    dec [(ADCINC12_1_ilncr + HighByte)]
    mov [(ADCINC12_1_ilncr + LowByte)],ffh
    endif10:
    asr [(ADCINC12_1_ilncr + HighByte)] ; divide by 4
    rrc [(ADCINC12_1_ilncr + LowByte)]
    asr [(ADCINC12_1_ilncr + HighByte)]
    rrc [(ADCINC12_1_ilncr + LowByte)]

    mov [ADCINC12_1_flgncr],01h ;Set AD data flag
    ; User code here for interrupt system.
    cmp [ADCINC12_1_blnrc],00h
    jz endif3

; if(ADCINC12_1_blnrc is not zero)
    dec [ADCINC12_1_blnrc]
    jnz endif4

; if(ADCINC12_1_blnrc has decremented down to zero to 0)
    mov reg[ADCINC12_1_TimerCR0],00h ;disable the Timer
    mov reg[ADCINC12_1_CounterCR0],00h ;disable the Counter
    nop
    nop
    and reg[INT_MSK1],~(ADCINC12_1_TimerMask | ADCINC12_1_CounterMask)
    ;Disable both interrupts
    or reg[ADCINC12_1_AtoDcr3],10h ;Reset Integrator
    reti
    endif4;;
    endif3;;
endif2;;
    mov [ADCINC12_1_cTimerU],00h ;Set Timer for one cycle of reset
    mov [ADCINC12_1_cCounterU],ffh ;Set Counter hardware for easy enable
    mov reg[ADCINC12_1_CounterDR1],ffh
    reti
endif1;;

```

ADCINC12_1_APIINT_END: A/D converter.

Fig. 12B

1300

```

;-----
; Interrupt Vector Table
;-----
;
; Interrupt vector table entries are 4 bytes long
;and contain the code
; that services the interrupt (or causes it to be
;served).
;
;-----

```

AREA TOP(ROM, ABS)

```

org 0          ; Reset Interrupt Vector
jmp __start    ; First instruction
;executed following a Reset

```

```

org 04h        ; Supply Monitor Interrupt
;Vector
// call void_handler
reti

```

```

org 08h        ; PSoC Block DBA00
;Interrupt Vector
1305 jmp ADCINC12_1_TMR_INT
reti

```

```

org 0Ch        ; PSoC Block DBA01
;Interrupt Vector
1305 jmp ADCINC12_1_CNT_INT
reti

```

```

org 10h        ; PSoC Block DBA02
;Interrupt Vector
// call void_handler
reti

```

```

org 14h        ; PSoC Block DBA03
;Interrupt Vector
jmp Counter16_1INT
reti

```

```

org 18h        ; PSoC Block DCA04
;Interrupt Vector
// call void_handler
reti

```

```

org 1Ch        ; PSoC Block DCA0
;Interrupt Vector
jmp PWM16_1INT
reti

```

```

org 20h        ; PSoC Block DCA06
;Interrupt Vector
jmp UART_1TX_INT
reti

```

```

org 24h        ; PSoC Block DCA07
;Interrupt Vector
1305 jmp UART_1RX_INT
reti

```

```

org 28h        ; Analog Column 0
;Interrupt Vector
// call void_handler
reti

```

```

org 2Ch        ; Analog Column 1
;Interrupt Vector
// call void_handler
reti

```

```

org 30h        ; Analog Column 2
;Interrupt Vector
// call void_handler
reti

```

```

org 34h        ; Analog Column 3
;Interrupt Vector
// call void_handler
reti

```

```

org 38h        ; GPIO Interrupt Vector
// call void_handler
reti

```

```

org 3Ch        ; Sleep Timer Interrupt
;Vector
jmp SleepTimerISR
reti

```

Fig. 13A

1351

<i>boot.asm</i> Interrupt Name	Data Sheet Interrupt Name	Type
_start	Reset	Fixed
Interrupt1	Supply Monitor	Fixed
Interrupt2	DBA00	PSoC Block
Interrupt3	DBA01	PSoC Block
Interrupt4	DBA02	PSoC Block
Interrupt5	DBA03	PSoC Block
Interrupt6	DCA04	PSoC Block
Interrupt7	DCA05	PSoC Block
Interrupt8	DCA06	PSoC Block
Interrupt9	DCA07	PSoC Block
Interrupt10	Analog Column 0	PSoC Block
Interrupt11	Analog Column 1	PSoC Block
Interrupt12	Analog Column 2	PSoC Block
Interrupt13	Analog Column 3	PSoC Block
Interrupt14	GPIO	Fixed
Interrupt15	Sleep Timer	Fixed

Fig. 13B

